

Assembly Instructions for Low Country Lounger (Wicker or Wood)

Installing the Eyebolt

Locate ceiling joist (by Stud Finder or tapping and verifying with a small nail). Be sure to locate exact center. Using a 3/16" (3mm) wood drill bit, drill a starter hole (approx. 4" (10cm) deep) perpendicular to the ceiling. Screw in the supplied eyebolt until all threads have disappeared into the joist. Do not loosen or adjust once in place. **Caution:** swinging could loosen the eyebolt and compromise the sturdiness.

Assembly

Locate all of your Low Country Lounger parts, including:

- a. Center cushion piece (1)
- b. Footrest with rope attached (1)
- c. Set of round spreader bars (2)
- d. Set of bent arms attached to the overhead square bar via ropes (2)
- e. Hardware pack wrapped inside the cup holder (4)
- f. 1" inch aluminum support poles for extension fold at the front of the chair (2)

Place the wicker or wooden bent arms on the ground making sure the arms are face up and the ropes are not twisted or turned, impeding the next step. Insert the rope through the hole on the back of the bent arms and tie a small knot (The brake should be on the backside. If they are on the front, simply untie the front knot and revers the clips to the backside).

Place the cushion part of the chair in between the bent arms on the ground.

- Thread the two round spreader bars through the sleeves underneath the cushion (one sleeve is on top and bottom of the main cushion).
- Connect the cut away section of the round spreader bars onto the top matching section of the bent wicker or wooden arms.
- Slide the 1" round poles in each side of the lounge extension at the front of the chair and seal with the Velcro cover to lock each pole in place.
- Fold lounge extension underneath chair and connect at the clips or straps.
- Using the hardware provided, connect the round spreader bars to the bent wicker or wooden arms by placing the hex bolt through the spreader bar and bent wicker or wooden arms from front to back. Bolt down firmly using the washer and nut. Repeat this procedure in all four corners of the chair. Use the wrench to tighten the bolt until it is flush with the front side of the wicker or wood.

Important Reminders:

- ✓ The Low Country Lounger is NOT a swing. We highly recommend using only a gentle to and from motion.
- ✓ Check the eyebolt from time to time to make sure it's holing fast.
- ✓ A periodic visual inspection of the ropes, hardware and other attachment hardware is recommended.
- ✓ Use a readily available fabric protector on the pad and ropes to resist stains.
- ✓ We highly recommend hanging no more than 18" above the ground.
- ✓ The Low Country Lounger has a rated load of 350 pounds.
- ✓ Enhance your relaxation with optional springs and footrests.

Washing and Care Instructions:

Your Low Country Lounger will last longer depending on its use, where it is installed and the care it is given. It will last longer if you keep it dry and store it indoors when not in use. To wash, scrub gently with a soft brush and a mixture of water and a mild laundry detergent.

Warning: Not suitable for washing machines, tumble dryers or chemical bleaches.

Disclaimer:

Southern Comfort Swings Co and all agents and representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of this product in a manner not expressly intended by the manufacturer. End consumer is ultimately responsible for verifying proper installation and eyebolt according to guidelines explained here within. We strongly recommend that you adhere to our maximum weight recommendations.