


ASSEMBLY INSTRUCTIONS FOR
CHARLESTON LOVESEAT
WICKER

S O C O

S W I N G S™

Key

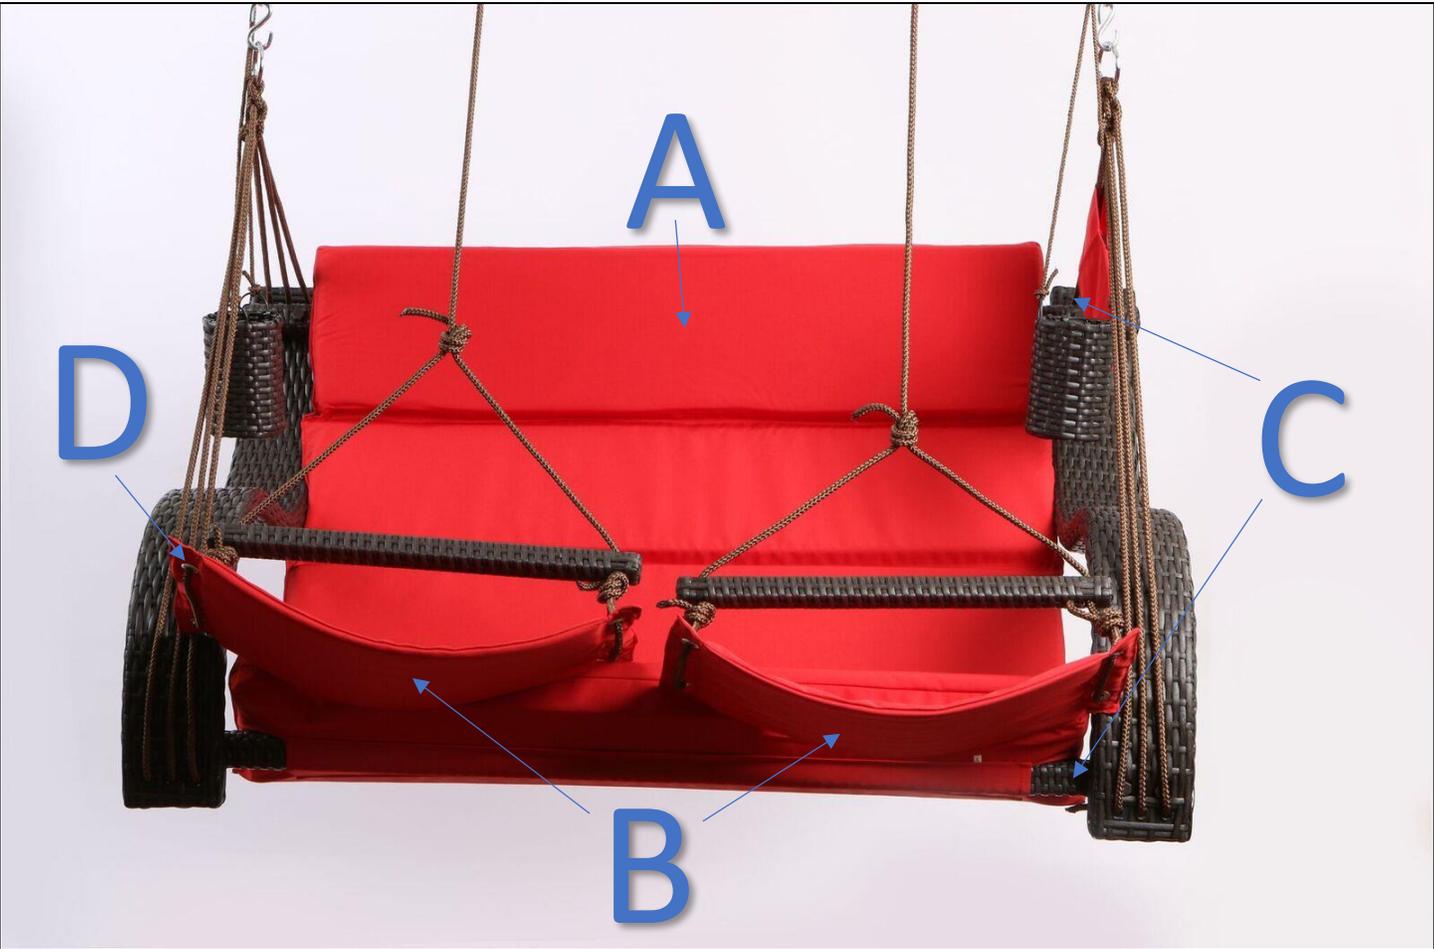

Assembly

1. Locate all your Charleston Loveseat parts, including:

A. Center cushion piece (1)

B. Footrests with rope attached (2)

C. Set of loveseat spreader bars (2) and footrest spreader bar (1; not pictured, contains two mini eye bolts installed in the middle of the bar)

D. Set of bent arms (2)



E. Hardware pack wrapped inside the cup holder (contains 2 eye bolts, 2 S-hooks, 2 chains, hex bolts, nuts, washers, hex bolt head covers, and wrench) Note: Items in pack pictured, but not quantity.

2. Place the wicker bent arms on the ground making sure the arms are face up and ropes are not twisted or turned (this impedes the next step).


3. Place the cushion in between the bent arms (which are still on the ground). The SoCo tag on the cushion should be on the backside of the chair (not facing out) positioned at the top.



4. Thread the two loveseat spreader bars through the sleeves on the underside of the cushion.



5. Align the top spreader bar to the top Front of each arm.

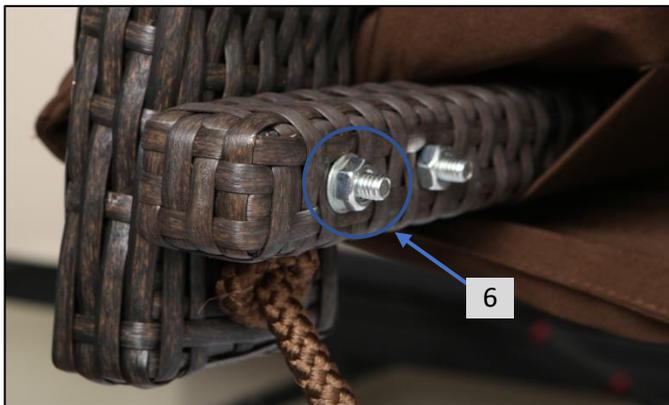

6. Insert a hex bolt (front to back) into each hole and tighten nut and washer using the wrench included in the kit. Tighten each bolt until it is flush with the front side of the wicker.



7. Repeat steps 5 and 6 for the bottom of the arms BUT put the spreader bar on the back of each arm.



8. Place plastic covers included in your hardware kit over the hex bolts.

9. Attach your Happy Bag and Happy Hour Cup Holder to the loveseat, hang loveseat from the eye bolts (see instructions below) or frame, and enjoy!

Installing the Eye Bolts



Locate the ceiling beam/joist by using a stud finder or tapping and verifying with a small nail. Be sure to locate the exact center of the ceiling joist for the most secure installation. Using a 3/16" (3mm) wood drill bit, drill a starter hole (approx. 4" or 10 cm deep) perpendicular to the ceiling. Screw in the supplied eye bolts until all threads have disappeared into the joist. Do not loosen or adjust once in place.


Caution: We highly recommend using only a gentle to and fro motion. Swinging or spinning could loosen the eye bolts from the ceiling joist and compromise the sturdiness. We highly recommend hanging the loveseat no more than 18" above the ground and not exceeding a maximum weight recommendation of 550 pounds.

When hanging the loveseat, be sure the ropes are not tangled or caught behind the spreader bars. The ropes must be free and clear when lifting the loveseat.

With a person on each side, lift the loveseat and connect the S-hooks (provided in the hardware kit) to the eye bolts in the ceiling beam (or frame if that's what you're using to hang the loveseat). If the eye bolts are too high, use the chains (provided in the hardware kit) to bridge the gap between the eye bolts and the S-hooks.

Hanging the Footrests


Note: images used to illustrate this section are of the wooden loveseat; the instructions apply to both models—wooden and wicker.

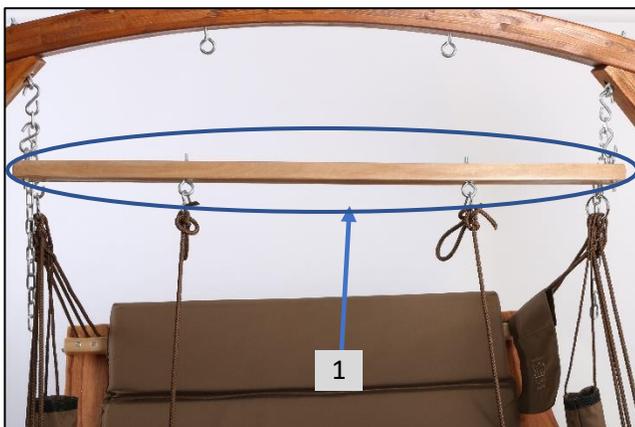

1. To hang the footrests, use the third spreader bar containing two smaller eye bolts in the middle of the bar (position them facing down) and two larger eye bolts on the ends of the bar (when the smaller eye bolts are positioned facing down, the larger eye bolts will face up).



2. Using two S-hooks, attach the spreader bar to the chains or eye bolts suspending the loveseat by threading S hooks to the larger eye bolts on each end of the spreader bar.

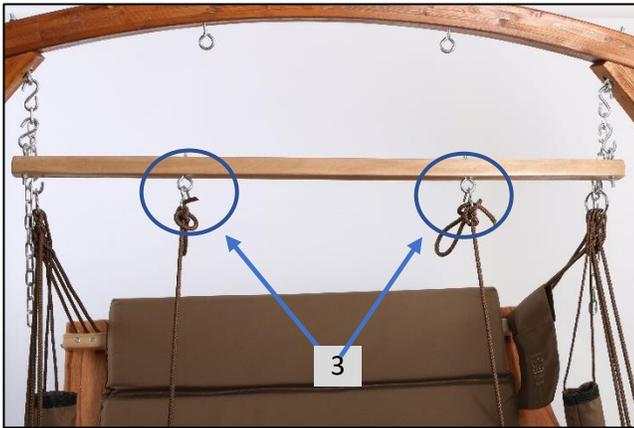

3. The smaller eye bolts in the middle of the spreader bar are for the footrests. The ropes on the footrests have S-hooks attached. Use those hooks to attach the ropes to the spreader bar.

NOTE: This spreader bar should not be used in any way to support the weight of the loveseat (use chains and S-hooks). Individuals should also not sit on the bar once it's installed. It should only be used to support the footrests.

Washing and Care Instructions

Your loveseat will last longer depending on its use, where it is installed, and the care it is given. It will last longer if you keep it dry by either covering it (yes, we sell those!) or storing it indoors when not in use. We recommend using a fabric protector such as Scotchgard on the pad and ropes to resist stains. To wash, scrub gently with a soft brush and a mixture of water and a mild laundry detergent. You can spot-treat stains using Resolve, Shout, or other laundry stain removers on the fabric parts of the lounger. **Warning: Not suitable for washing machines, tumble dryers, or chemical bleaches.**

Important Reminders

- ✓ The loveseat is NOT a swing. We highly recommend using only a gentle to and fro motion. Swinging or spinning could loosen the eye bolts from the ceiling joist and compromise the sturdiness.
- ✓ Check the eye bolts from time to time to make sure they're holding fast.
- ✓ Visually inspect the ropes, loveseat hardware, and attachment hardware periodically.
- ✓ We highly recommend hanging the loveseat no more than 18" above the ground.
- ✓ Sit on the loveseat gently as it will stretch at first. You can always take up the slack later.
- ✓ We recommend not exceeding a maximum weight limit of 550 pounds.
- ✓ Enhance your relaxation with optional springs.

Warranty

Your loveseat is guaranteed for two (2) years from the date of purchase to be free from defects in workmanship and materials, under normal residential use and conditions. SoCo Swings agrees, at its option during the warranty period, to furnish a product of equal value in exchange without charge (except for a fee for shipping, handling, packing, return postage, and insurance which will be incurred by the customer). Such repair or replacement is subject to verification of the defect or malfunction and proof of purchase as confirmed by showing the model number on original dated sales receipt.

Warranty Limitations

This warranty does **not** include:

- Any condition resulting from other than ordinary residential wear or any use for which the product was not intended
- Any condition resulting from incorrect or inadequate maintenance or care
- Damage resulting from misuse, abuse, negligence, accidents, or improper installation
- Dissatisfaction due to buyer's remorse
- Normal wear and tear
- Damages incurred during transportation
- Damages incurred during assembly or maintenance
- Any used, previously displayed items (such as a demo item)

Disclaimer

SoCo Swings and all agents and representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of the loveseat in a manner not expressly intended by the manufacturer. The loveseat is NOT a swing. We highly recommend using only a gentle to and fro motion. Swinging or spinning could loosen the eye bolts from the ceiling joist and compromise the sturdiness. The end consumer is ultimately responsible for verifying proper installation of the loveseat and the eye bolts according to the guidelines explained in this installation guide. We strongly recommend not exceeding our maximum weight limit of 550 pounds.

If you have any questions regarding our products, please contact us via email info@socoswings.com and/or our website: www.socoswings.com. If you're not totally satisfied with any part of your purchase or gifting experience, please let us know. Our customer service reps are fully trained, happiness ninjas ready to solve your problems quickly, efficiently, and with as little fuss as possible.