


ASSEMBLY INSTRUCTIONS FOR
LOW COUNTRY WICKER
LOUNGER

SOCO

SWINGS™

Key

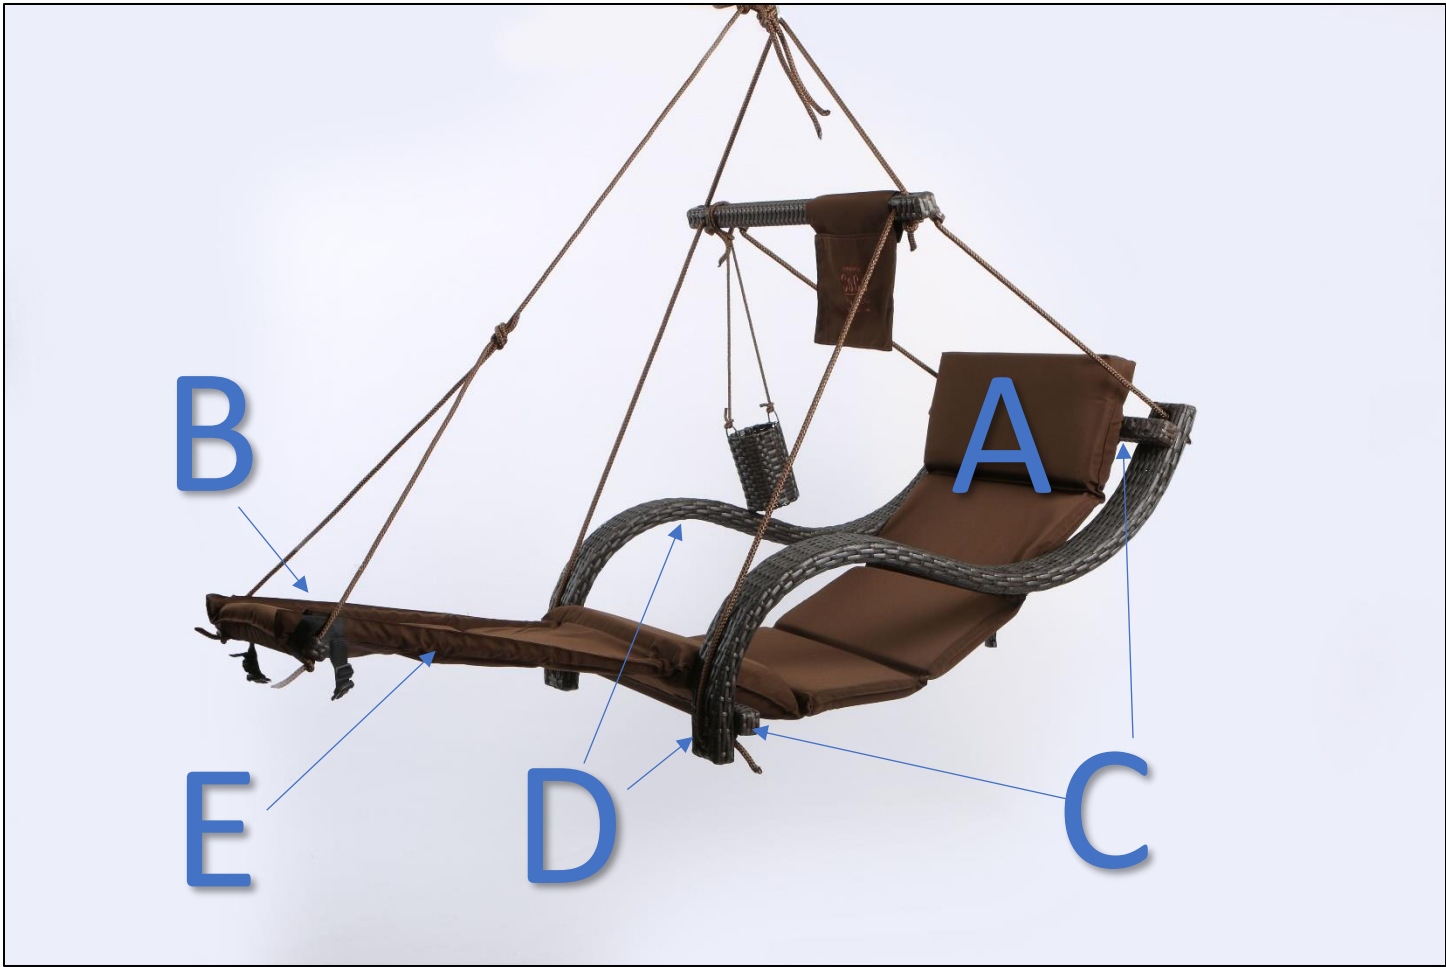

Assembly

1. Locate all your Low Country Lounger parts, including (see diagram on previous page):

- A. Center cushion piece (QTY 1)
- B. Footrest with rope attached (QTY 1)
- C. Set of spreader bars (QTY 2)
- D. Set of bent arms attached to the overhead square bar via ropes (QTY 2)
- E. 1" aluminum support poles for the lounge extension at the foot of the chair (QTY 2)



- F. Hardware pack wrapped inside the cup holder (contains 1 eye bolt, 1 S-hook, 1 chain, hex bolts, nuts, washers, hex bolt head covers, and wrench; brakes are attached to the ropes—two extra are included as spares)

2. Place the wicker bent arms on the ground making sure the arms are face up and ropes are not twisted or turned (this impedes the next step). Insert the rope through the hole on the back of the bent arms and tie a small knot.

Note: The brake should be on the backside. If they are on the front, untie the front knot and reverse the clips to the backside.




3. Place the cushion in between the bent arms (which are still on the ground). The SoCo tag on the cushion should be on the backside of the chair (not facing out) positioned at the top.



4. Thread the two spreader bars through the sleeves on the underside of the cushion.



5. Align the top spreader bar to the top Front of each arm.

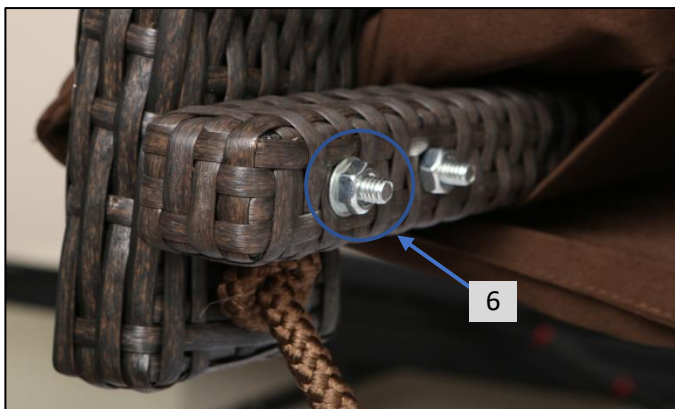

6. Insert a hex bolt (front to back) into each hole and tighten nut and washer using the wrench included in the kit. Tighten each bolt until it is flush with the front side of the wicker.




7. Repeat steps 5 and 6 for the bottom of the arms BUT put the spreader bar on the back of each arm.



8. Slide the 1" aluminum support poles in each side of the lounge extension at the front of the chair and seal with the Velcro flap to lock each pole in place.

Note: When you use the lounge as a chair, fold lounge extension underneath the chair, tuck the lounge extension rope into the pocket underneath the chair, and connect the plastic buckles. When you want to use the lounge extension, hang the extension rope's S-hook on the chain suspending your chair.



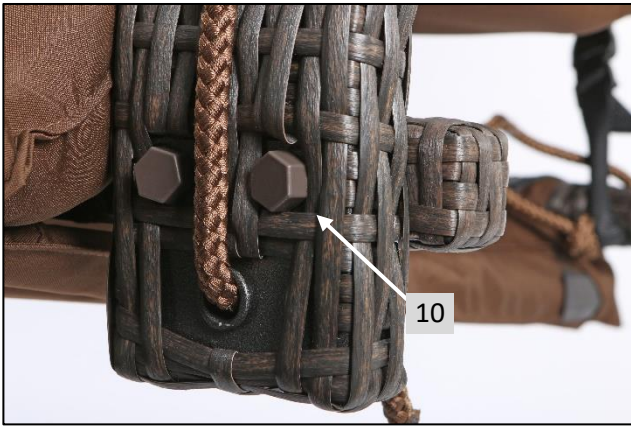

9. Place plastic covers included in your hardware kit over the hex bolts.

10. Attach your Happy Bag and Happy Hour Cup Holder to the lounge, hang lounge from the eye bolt (see instructions below) or frame, and enjoy!

Installing the Eye Bolt



Locate the ceiling beam/joist by using a stud finder or tapping and verifying with a small nail.

Be sure to locate the exact center of the ceiling joist for the most secure installation. Using a 3/16" (3mm) wood drill bit, drill a starter hole (approx. 4" or 10 cm deep) perpendicular to the ceiling.

Screw in the supplied eye bolt until all threads have disappeared into the joist. Do not loosen or adjust once in place.

Caution: swinging or spinning could loosen the eye bolt from the ceiling joist and compromise the sturdiness. We highly recommend hanging the Low Country Wicker Lounger no more than 18" above the ground and not exceeding a maximum weight recommendation of 350 pounds.

Washing and Care Instructions

Your Low Country Wicker Lounger will last longer depending on its use, where it is installed, and the care it is given. It will last longer if you keep it dry by either covering it (yes, we sell those!) or storing it indoors when not in use. We recommend using a fabric protector such as Scotchgard on the pad and ropes to resist stains. To wash, scrub gently with a soft brush and a mixture of water and a mild laundry detergent. You can spot-treat stains using Resolve, Shout, or other laundry stain removers on the fabric parts of the lounger. **Warning: Not suitable for washing machines, tumble dryers, or chemical bleaches.**

Important Reminders:

- ✓ The Low Country Wicker Lounger is NOT a swing. We highly recommend using only a gentle to and fro motion. Swinging or spinning could loosen the eye bolt from the ceiling joist and compromise the sturdiness.
 - ✓ Check the eye bolt from time to time to make sure it's holding fast.
 - ✓ Visually inspect the ropes, lounger hardware, and attachment hardware periodically.
 - ✓ We highly recommend hanging the Low Country Wicker Lounger no more than 18" above the ground.
 - ✓ We recommend not exceeding a maximum weight limit of 350 pounds.
 - ✓ Enhance your relaxation with optional springs and footrests.
-

Warranty

Your Low Country Wicker Lounger is guaranteed for two (2) years from the date of purchase to be free from defects in workmanship and materials, under normal residential use and conditions. SoCo Swings agrees, at its option during the warranty period, to furnish a product of equal value in exchange without charge (except for a fee for shipping, handling, packing, return postage, and insurance which will be incurred by the customer). Such repair or replacement is subject to verification of the defect or malfunction and proof of purchase as confirmed by showing the model number on original dated sales receipt.

Warranty Limitations

This warranty does **not** include:

- Any condition resulting from other than ordinary residential wear or any use for which the product was not intended
- Any condition resulting from incorrect or inadequate maintenance or care
- Damage resulting from misuse, abuse, negligence, accidents, or improper installation
- Dissatisfaction due to buyer's remorse
- Normal wear and tear
- Damages incurred during transportation
- Damages incurred during assembly or maintenance
- Any used, previously displayed items (such as a demo item)

Disclaimer

SoCo Swings and all agents and representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of the Low Country Wicker Lounger in a manner not expressly intended by the manufacturer. The Low Country Wicker Lounger is NOT a swing. We highly recommend using only a gentle to and fro motion. Swinging or spinning could loosen the eye bolt from the ceiling joist and compromise the sturdiness. The end consumer is ultimately responsible for verifying proper installation of the chair and the eye bolt according to the guidelines explained in this installation guide. We strongly recommend not exceeding our maximum weight limit of 350 pounds.

If you have any questions regarding our products, please contact us via email info@socoswings.com and/or our website: www.socoswings.com. If you're not totally satisfied with any part of your purchase or gifting experience, please let us know. Our customer service reps are fully trained, happiness ninjas ready to solve your problems quickly, efficiently, and with as little fuss as possible.