


ASSEMBLY INSTRUCTIONS FOR  
RIDGECREST ARCH

**SOCO**

---

**SWINGS™**

**Key**

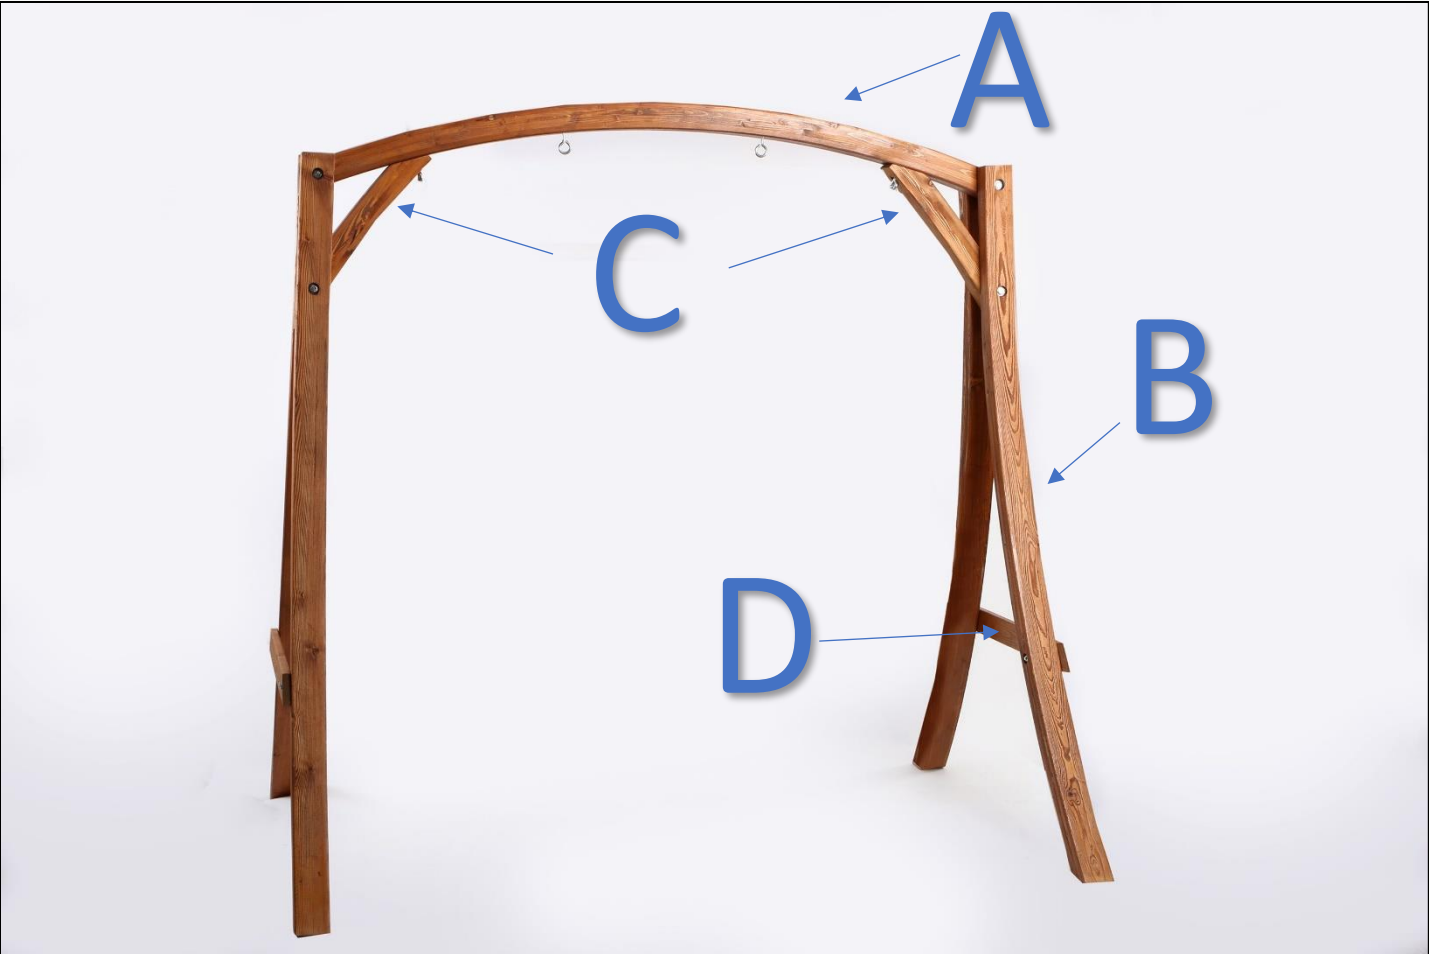

# Assembly

Locate all your RidgeCrest Arch parts, including:

- A. Top arch piece (QTY 1)
- B. Curved legs (QTY 4)
- C. Arch supports (QTY 2)
- D. Straight lower leg supports (QTY 2)

E. Hardware pack—contains:




- 4½" bolt assembly set (each set consists of 1 bolt, 1 nut, and 1 washer; QTY4)
- 8½" bolt assembly set (each set consists of 1 bolt, 1 nut, and 1 washer; QTY2)
- 2" eye bolts (use when hanging a love seat; QTY2)
- 6" eye bolts (use when hanging two low country loungers; QTY3)
- Wrench

## Essential Assembly Tips

- ✓ Use two people to assemble the RidgeCrest Arch
- ✓ Hand tighten bolts until completely assembled, then go back and tighten all bolts with a wrench
- ✓ Refer to pictures in this guide frequently during assembly
- ✓ Straight leg supports go on the outside of the arch
- ✓ Arch support piece has two sides—one side has an obtuse angle; the other side has an acute angle.


## Assembly Instructions

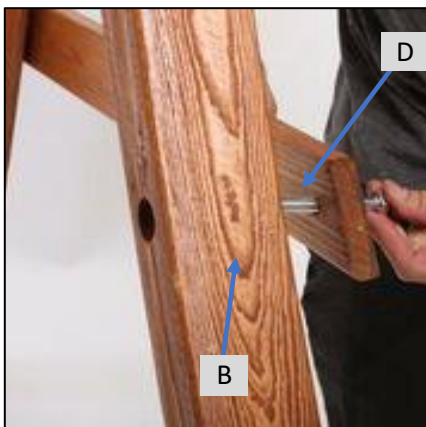


1. Connect each lower leg support (D) to a curved leg (B) at the bottom using a 4½" bolt assembly set. Do this for both the left and right sides of the arch. At this stage only hand tighten the bolts.



2. Attach top arch piece in between the top of the assembled leg supports (left and right sides) and secure each side with an 8½" bolt set. At this stage only hand tighten the bolts.

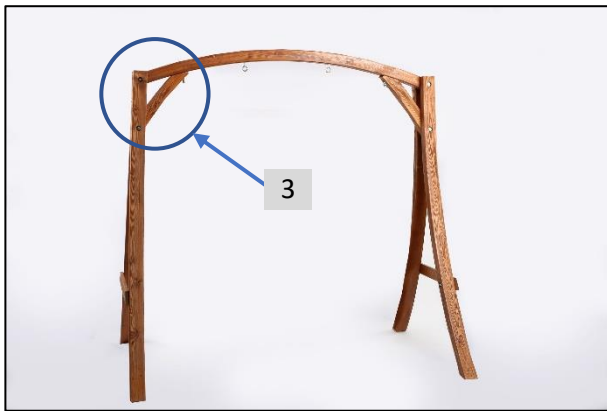


3. Attach an arch support to the corner of the arch using an 8½" bolt assembly (see 3A and 3B for more information on how to complete this step). Do this for both sides.

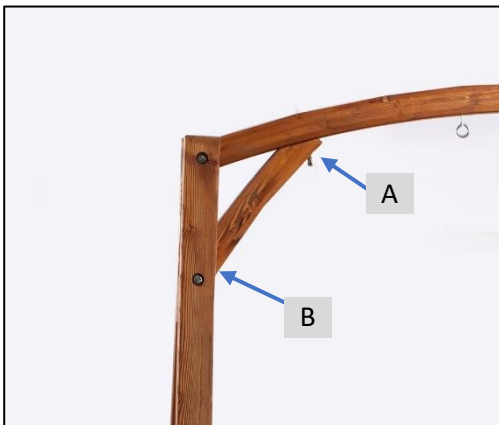


A. Connect the arch support's obtuse side to the underside of the top arch using an 8½" bolt assembly set. At this stage only hand tighten the bolts.



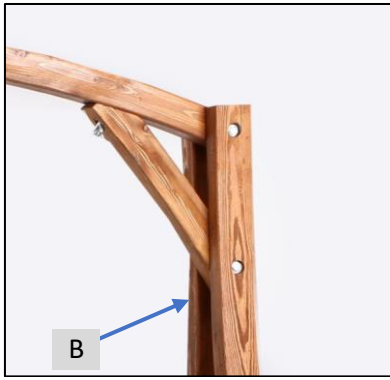

B. Connect the arch support's acute side between the support legs using an 8½" bolt assembly set. At this state only hand tighten the bolts.

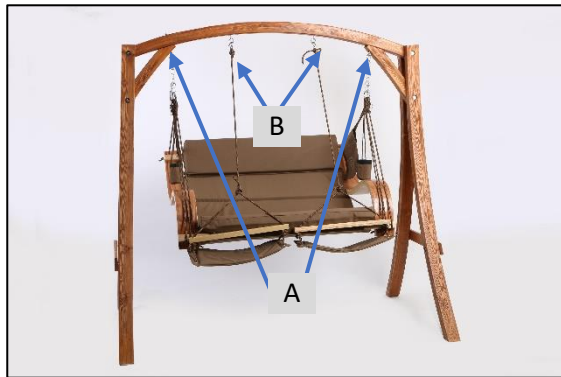

4. Go back and tighten all bolts with wrench.

5. Add eye bolts to the underside of the top arch to hang the loveseat.

A. To hang a loveseat, screw in two 6" eye bolts into the predrilled holes in the corners of the arch supports.

B. To hang the footrest, screw two 2" eye bolts into the predrilled holes on the underside of the arch.

## Care Instructions

Your arch will last longer depending on its use, where it is installed, and the care it receives. It will last longer if you keep it in a covered area or weather-treat it before use. The arch comes in unfinished wood—staining, painting, or weather treating is recommended to extend the life of it.

---

## Important Reminders:

---

- ✓ The loveseat is NOT a swing. We highly recommend using only a gentle to and fro motion. Swinging or spinning could loosen the eye bolts from the RidgeCrest arch and compromise the sturdiness.
- ✓ Check the eye bolts from time to time to make sure they're holding fast.
- ✓ Visually inspect the ropes, loveseat hardware, and attachment hardware periodically.
- ✓ We highly recommend hanging the loveseat no more than 18" above the ground.
- ✓ Sit on the loveseat gently as it will stretch at first. You can always take up the slack at a later time.
- ✓ We recommend not exceeding a maximum weight limit of 550 pounds.
- ✓ Enhance your relaxation with optional springs.

---

## Warranty

---

Your arch is guaranteed for two (2) years from the date of purchase to be free from defects in workmanship and materials, under normal residential use and conditions. SoCo Swings agrees, at its option during the warranty period, to furnish a product of equal value in exchange without charge (except for a fee for shipping, handling, packing, return postage, and insurance which will be incurred by the customer). Such repair or replacement is subject to verification of the defect or malfunction and proof of purchase as confirmed by showing the model number on original dated sales receipt.

---

## Warranty Limitations

---

This warranty does **not** include:

- Any condition resulting from other than ordinary residential wear or any use for which the product was not intended
- Any condition resulting from incorrect or inadequate maintenance or care
- Damage resulting from misuse, abuse, negligence, accidents, or improper installation
- Dissatisfaction due to buyer's remorse
- Normal wear and tear
- Damages incurred during transportation
- Damages incurred during assembly or maintenance
- Any used, previously displayed items (such as a demo item)

# Disclaimer

---

SoCo Swings and all agents and representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of the loveseat in a manner not expressly intended by the manufacturer. The end consumer is ultimately responsible for verifying proper installation of the loveseat and the eye bolts according to the guidelines explained in this installation guide. We strongly recommend not exceeding our maximum weight limit of 550 pounds.

If you have any questions regarding our products, please contact us via email [info@socoswings.com](mailto:info@socoswings.com) and/or our website: [www.socoswings.com](http://www.socoswings.com). If you're not totally satisfied with any part of your purchase or gifting experience, please let us know. Our customer service reps are fully trained, happiness ninjas ready to solve your problems quickly, efficiently, and with as little fuss as possible.